

Square PermaCast® RoughSawn® Column

10"x10"x9'-0"

SKU: Col.-47031 Cap/Base-660004,660006

Product Material: FRP

Notes

- Tolerances: +/- 1/4" in all dimensions
- Whole columns must have 75% contact at the top and 100% contact at the bottom. For split columns, leave a 1/2" - 1" gap between the top of the column and the header. See Installation Instructions.
- Column must be primed, stained and or painted after installation on jobsite. If column is not primed and painted it will turn a yellowish color due to UV rays. Follow paint manufacturer's instructions for priming and finishing of fiberglass composite column and polyurethane cap and base.
- 10" Square RoughSawn PermaCast column has a concentric load bearing capacity of 14,000 lbs max.
- 10" Square RoughSawn PermaCast column has an eccentric; average allowable load of 5,640 lbs.
- Once the column is split it has NO load bearing capabilities.
- Top of column is attached to header with a flashing cap. Bottom of column is attached to substrate with 'L' brackets when using cap/base set.
- Column inside dimensions:
Top: 8-3/4"
Bottom: 8-3/4"
- *Inside dimensions have an 1/8" tolerance*
- Columns are not intended to be used in a free standing application without the use of a tie down system.

Drawn by: CAG
Date: 13 May 2019
Scale: NTS



1015 Brundage Blvd.
P.O. Box 589
Troy, Alabama 36081
334.566.5000
Fax 334.566.4626
www.hbgcolumns.com

