

Square PermaCast® RoughSawn® Column

8"x8"x9'-0"

SKU: Col.-47021 Cap/Base-660004,660006

Product Material: FRP

### Notes

- Tolerances: +/- 1/4" in all dimensions
- Whole columns must have 75% contact at the top and 100% contact at the bottom. For split columns, leave a 1/2" - 1" gap between the top of the column and the header. See Installation Instructions.
- Column must be primed, stained and or painted after installation on jobsite. If column is not primed and painted it will turn a yellowish color due to UV rays. Follow paint manufacturer's instructions for priming and finishing of fiberglass composite column and polyurethane cap and base.
- 8" Square RoughSawn PermaCast column has a concentric load bearing capacity of 10,000 lbs max.
- 8" Square RoughSawn PermaCast column has an eccentric; average allowable load of 5,150 lbs.
- Once the column is split it has NO load bearing capabilities.
- Top of column is attached to header with a flashing cap. Bottom of column is attached to substrate with 'L' brackets when using cap/base set.
- Column inside dimensions:  
Top: 6-3/4"  
Bottom: 6-3/4"
- \*Inside dimensions have an 1/8" tolerance\*
- Columns are not intended to be used in a free standing application without the use of a tie down system.

Drawn by: CAG  
Date: 13 May 2019  
Scale: NTS



1015 Brundage Blvd.  
P.O. Box 589  
Troy, Alabama 36081  
334.566.5000  
Fax 334.566.4626  
www.hbgcolumns.com

